


VALVE FUNCTION

- Valve closes at a controlled rate (adjustable) when outlet/downstream pressure exceeds inlet/upstream pressure.
- Valve opens at a controlled rate (adjustable) when inlet/upstream pressure exceeds outlet/ downstream pressure.

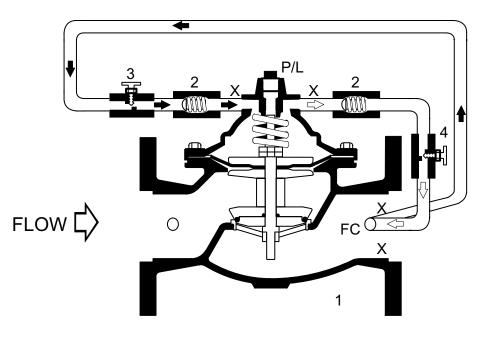

Flow Direction Shown: "R" Flow Over the Seat



COMPONENTS

- 1 Main Valve
- 2 Check Valve
- 3 Needle Valve Adj. Closing Speed
- 4 Needle Valve Adj. Opening Speed

ACCESSORIES

Located as indicated Included as marked

